

NEWHANK
QUALITY AV PRODUCTS

DUS 1 manual

Getting started	2
Box content	2
Features	2
Installing the DUS 1	2
Frontpanel description	4
Backpanel description	5
Troubleshooting	5

Getting started

Thank you for your purchase of the NewHank DUS 1. Please take your time to read this manual and make sure the following items are inside the box:

Box content:

- DUS 1 Player
- Euro cable
- Remote control (2x AAA batteries not included)
- 2x 19" Rack ear inc 2x4 mounting screws


Features

- Player supports DVD, VCD, SVCD, CD, MP3 and MPEG4
- AVI Formats (not all formats are supported because of the Codec).
- 9 steps up/down digital key control.
- USB thumb drive and SD-card slots on the front panel.
- Headphones with level control on the front panel.
- 4,3 Inch LCD display, with a viewing angle of 180 degrees.
- Audio Outputs - RCA, XLR and S/PDIF (optical & coax).
- Video Outputs - BNC, HDMI, VGA, S-Video, Component and Composite.
- Remote Control.
- NTSC/PAL compatible for worldwide use.

Installing the DUS 1


The DUS 1 can be used tabletop or mounted in a 19" rack. 19" Ears and screws are included in the box and are easy to mount. First install all your cables before you switch on the unit.

Frontpanel description

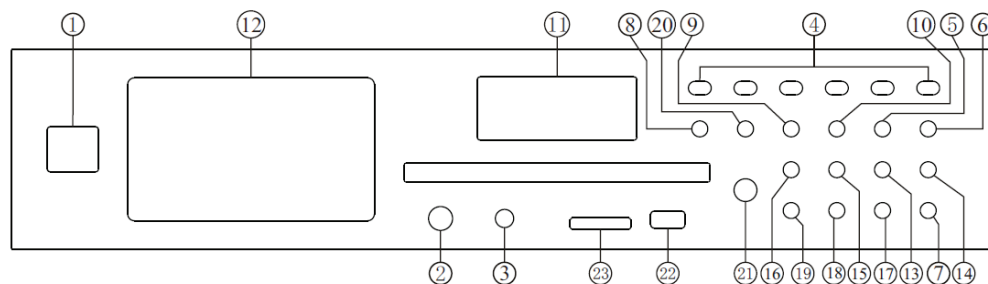

1. Power switch: When pressed the machine starts.
2. Headphone output : The Standard 6.35 mm Jack output for headphones.
3. Volume Control: Volume output knob for the headphone volume.
4. Selection buttons :1 to 10 selectable for fast track search .
5. Prev button :Press the button to play the previous track .
6. Next button: press the button to go to the next track.
7. Repeat : Use this button to repeat the track or the whole map or all media .
8. R/L : Selectable output ,Left/Right or Stereo .
9. Rev Button : Press the button to search previous in the track .
10. Fwd Button :Press the button to search forward in the track.
11. LCD Display : Shows information for media content .
12. 4.3 Inch Display: Shows the media content 1 on 1.
13. Key plus button Press this button to adjust the height of the tone.
14. Video switch: Press this button to switch directly from the default component output to VGA and S-video (Note :If you switch to VGA output the HDMI output won't work).
15. Key min button: Press this button to lower the tone.
16. Eject button: Press this button to open and close the disc loader.
17. Time button: Use this button to change the time mode (elapsed, remaining and total time).
18. Return button: Press this button immediately returns to the beginning of the current song.
19. Play button.
20. Source button : Selectable , Disc USB ,SD.
21. Remote Control : Remote control receiver.
22. USB interface: Acceptable standard USB input: Note the format should be formatted in Fat 32.
23. SD interface: Acceptable standard SD input.

Backpanel description

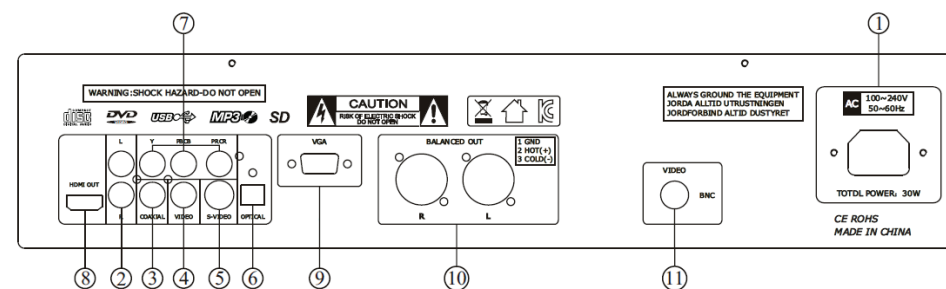

1. AC Power Input: accepts 110V AC to 240V AC.
2. Non - Balanced output: RCA signal left /right audio output.
3. Digital output: RCA digital signal output.
4. AV-Video output: Chinch yellow output.
5. S-Video output: S-Video out.
6. Optical output: SPDIF out.
7. Component video output: Y PbCb PrCr .
8. HDMI output.
9. VGA output.
10. XLR output: left/right symmetrical XLR output.
11. BNC Video output

Troubleshooting

No video on HDMI output : make sure the HDMI output is selected on in the menu .
 The system reset its self after shutdown: make sure you have the option "last memory on" in the menu .
 USB or SD is not recognized : Make sure you have a fast SD or USB stick and is FAT-32 Formatted